

1-channel hand-held radio transmitter, type TDRC-01



Overview of functions.....2
 Technical data and scope of delivery.....2
 Programming and setting.....3
 Contact information.....4

The signatory declares that the hand-held radio transmitter conforms with the Guidelines and Directives according to R&TTE 1999/5/EC.

Model: TDRC - 01


DIN EN 301489-3:2013-12, DIN EN 300220-3

Schoenberger Germany Enterprises GmbH & Co. KG
 Zechstraße 1-7
 82069 Hohenschäftlarn



Michael Mayer
 Managing Director

WEEE Reg. No. DE 41060608 for: JAROLIFT®™

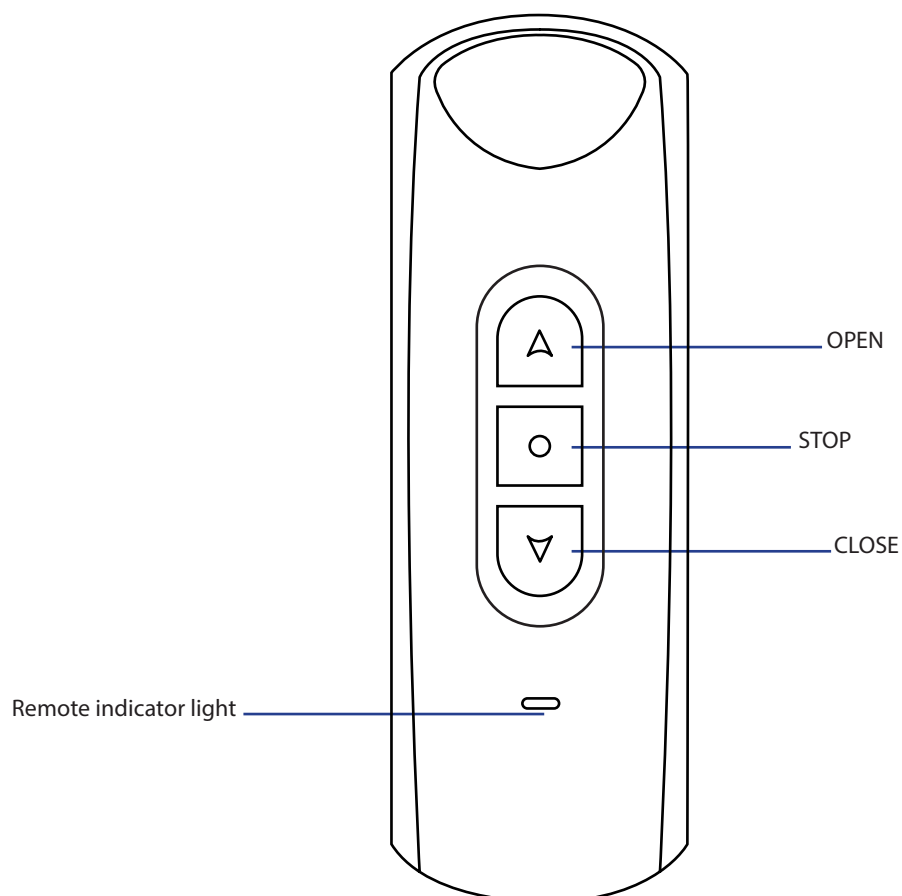

Technical data and scope of delivery

Technical data:	
Power supply:	3 Volt
Battery model:	CR2430
Operating current:	12 mA
Protection:	IP 30
max. authorised permissible ambient temperature:	-20°C to +60°C
Encoding the radio:	Rolling code
Radio frequency:	433.92 MHz
Channels:	1-channel
Compatibility:	Compatible with all TDR wireless motors and receivers, as of production date 03/2010

Once you have unpacked the unit, compare the content of the package with the information provided in these instructions about the scope of delivery:


1. Hand-held transmitter TDR-01
2. Wall bracket
Operating Instructions



Technical data and scope of delivery

- 1 First, set the respective radio receiver or wireless motor to the "TEACH" mode and follow the applicable instructions.
- 2 Within 10 seconds, press the OPEN and CLOSE button on your hand-held transmitter simultaneously and then press the STOP button briefly. Next, press the STOP button.

If the "TEACH" process was successful, it is acknowledged by the brief vibration of the tubular motor that is attached to the radio receiver, or by the vibration of the wireless motor. Now you can use the OPEN/STOP/CLOSE button to activate the motor on your transmitter.

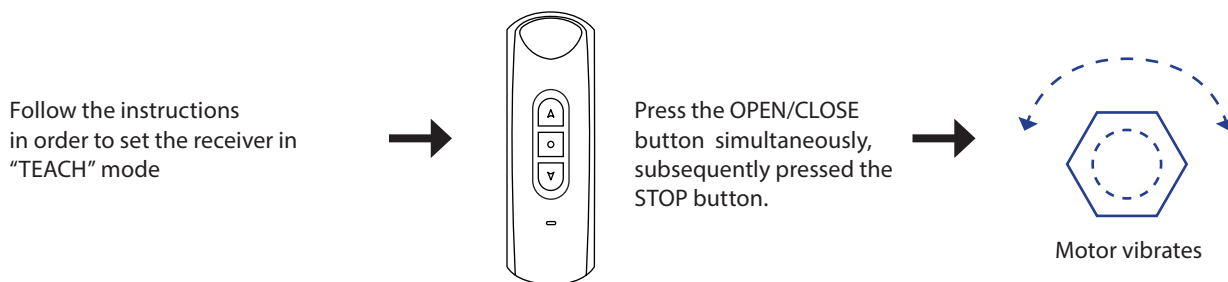

Each button must be depressed for approx. 1 second!

Note:

If you would like to operate additional receivers with this transmitter, proceed as described above.

If you have any concerns about our product or your unit is faulty, please contact us in writing or send an email to the following address:

JAROLIFT®™

is a registered trademark of
Schoenberger Germany Enterprises GmbH & Co. KG
Zechstraße 1 – 7
82069 Hohenschäftlarn

Tel.: 08178 / 932 932 / 3,425

Fax: 08178 / 932 939 / 425

info@jarolift.de

www.jarolift.de

Subject to technical changes, misprints and errors.