

# 4-channel hand-held radio transmitter, type TDRC-04



Overview of functions.....	2
Technical data .....	2
Programming and setting.....	3
Individual and group control system.....	3
Contact information.....	4

The signatory declares that the hand-held radio transmitter conforms with the Guidelines and Directives according to R&TTE 1999/5/EC.

Model: TDRC - 04


DIN EN 301489-3:2013-12, DIN EN 300220-3

Schoenberger Germany Enterprises GmbH & Co. KG  
Zechstraße 1-7  
82069 Hohenschäftlarn



  
Michael Mayer  
Managing Director

WEEE Reg. No. DE 41060608 for: JAROLIFT®™

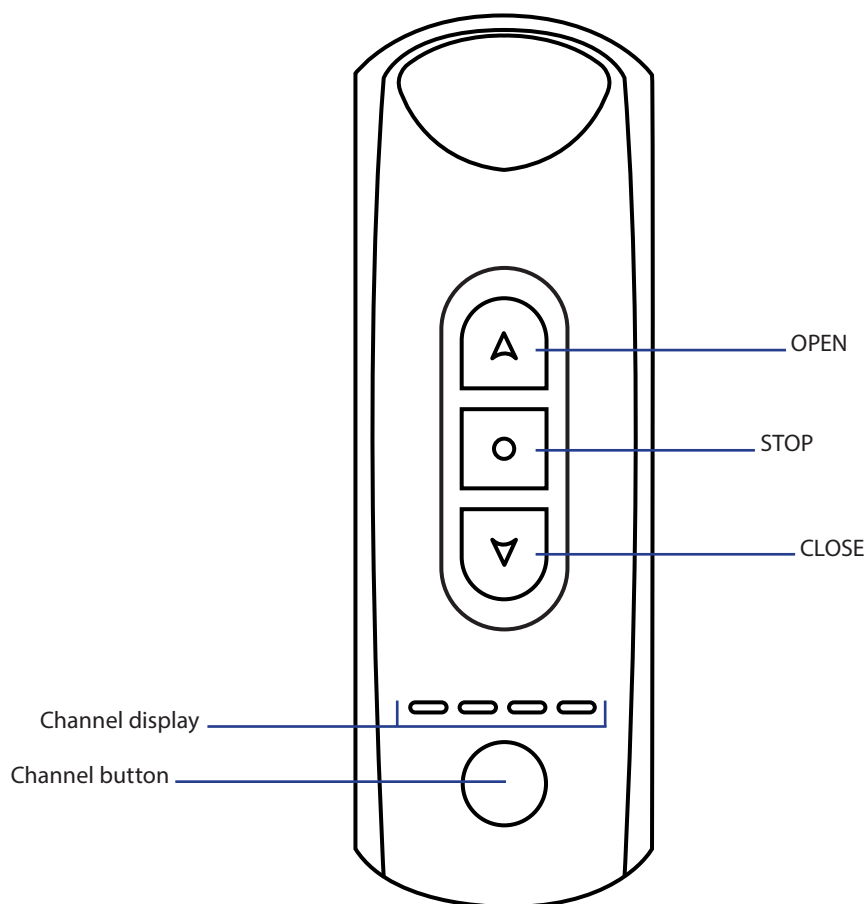

## Technical data and scope of delivery

Technical Data	
Power supply:	3 Volt
Battery model:	CR2430
Operating current:	12 mA
Protection:	IP 30
max. authorised permissible ambient temperature:	-20°C to +60°C
Encoding the radio:	Rolling code
Radio frequency:	433.92 MHz
Channels:	4-channel
Compatibility:	Compatible with all TDR wireless motors and receivers, as of production date 03/2010

After you have unpacked the device, check the package content with the information on the delivery slip:


- 1 Hand-held transmitter TDRC-04
- 2 Wall bracket  
Operating Instructions



## Technical data and scope of delivery

- 1 First, use the channel button (for description, in all see Page 1) to select the desired channel on which you would like to program the receiver. (An illuminated LED in the lower part of the hand-held unit displays the active channel)
- 2 Now, set the respective radio receiver or wireless motor to the "TEACH" mode and follow the applicable instructions.
- 3 Within 10 seconds, press the OPEN and CLOSE button on your hand-held transmitter simultaneously and then press the STOP button briefly. If the "TEACH" process was successful, it is acknowledged by the brief vibration of the tubular motor that is attached to the radio receiver, or the vibration of the wireless motor. Now you can use the OPEN/STOP/CLOSE button to activate the motor on your transmitter.

**Each button must be depressed for approx. 1 second!**

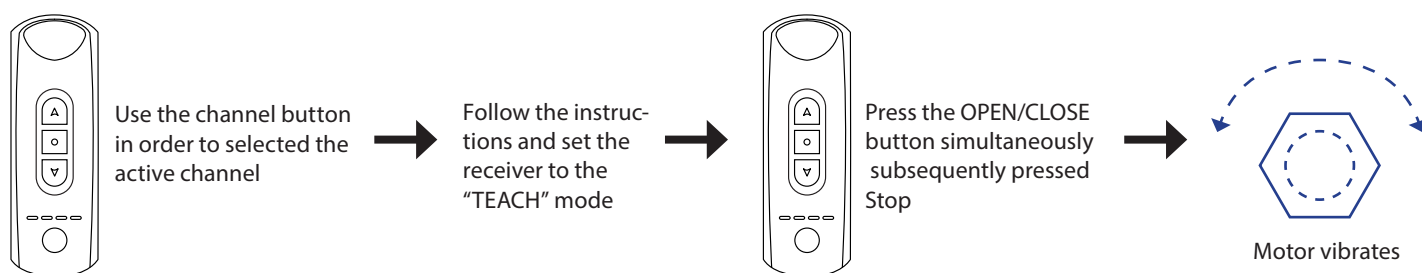

## Individual operation or group activation

The hand-held transmitter TDRCT-04 provides you with the option to operate 4 units individually or as a group via remote control. To do this, use the channel button to select the desired channel. Subsequently, you can use in the operating keys OPEN/STOP/CLOSE to control the active channel.

In order to selected the group operating mode, press the channel button several times. As soon as the hand-held transmitter passes the fourth channel, all 4 LEDs are highlighted. This indicates that all 4 channels are selected and can be operated simultaneous via the OPEN/STOP/CLOSE function.

In order to switch back to the individual operating mode, press the channel button again and the LED display will switch automatically to the first channel.

If you have any concerns about our product or your unit is faulty, please contact us in writing or send an email to the following address:

**JAROLIFT®™**

is a registered trademark of  
Schoenberger Germany Enterprises GmbH & Co. KG  
Zechstraße 1 – 7  
82069 Hohenschäftlarn

Tel.: 08178 / 932 932 / 3,425

Fax: 08178 / 932 939 / 425

[info@jarolift.de](mailto:info@jarolift.de)

[www.jarolift.de](http://www.jarolift.de)

Subject to technical changes, misprints and errors.